

COMPLETE INSTALLATION & PROGRAMMING GUIDE

Telematics Communicator System



This system must be installed by a professional.

NOTICE

The manufacturer will accept no responsibility for any electrical damage resulting from improper installation of this product, be that either damage to the vehicle itself or to the installed device. This device must be installed by a certified technician. Please review the Installation Guide carefully before beginning any work.



TABLE OF CONTENTS

HARDWARE PARTS	3
iDATASTART HCx	4
LED Status Reference Chart	6
RESET PROCEDURE	6



CREATE AN ACCOUNT

Before beginning the installation and setting the configurations of a MyCar Controls unit, we strongly recommend downloading the Application from the App store and create a user account.

- a. Go to the App store (Apple) or Play store (Android) and Search for "MYCAR CONTROLS". Download and install the Free Application.
- b. Launch the newly installed MyCar Application on your smartphone or tablet
- c. Click "Create an Account"
- d. Fill in all the required fields
- e. Once completed, click "Create your Account"
- f. Open your Email and look for a new email sent from "MYCARCONTROLS"
- g. To activate your account and create your secure password, click the embedded link in the email.
- h. Create your secure password and activate your account.
- i. Once done, Log into the Application using your email and your newly created password.



AR-3HU / VS-4LU



HRN-MCAR-01






HRN-LLRS-01



HRN-DRS-02


PARTS REQUIRED FOR INSTALLATION OF : iDATASTART HCx

<p>Telematics device</p> 	<p>HRN-MCAR-01</p> 	<p>MMCAHCXMI1 or MI2 or MI3</p> 	
--	--	--	--

STEP 1. CONFIGURE THE REMOTE STARTER

The ADS Weblink (ADS-USB) is required to properly configure the MMCAHCXMI1 or MI2 or MI3 remote starter to accept the telematic device. When flashing the MMCAHCXMI1 or MI2 or MI3 remote starter, **please ensure to turn ON the Telematics option from the telematics section and choose "MyCar"**.

STEP 2. CONNECT

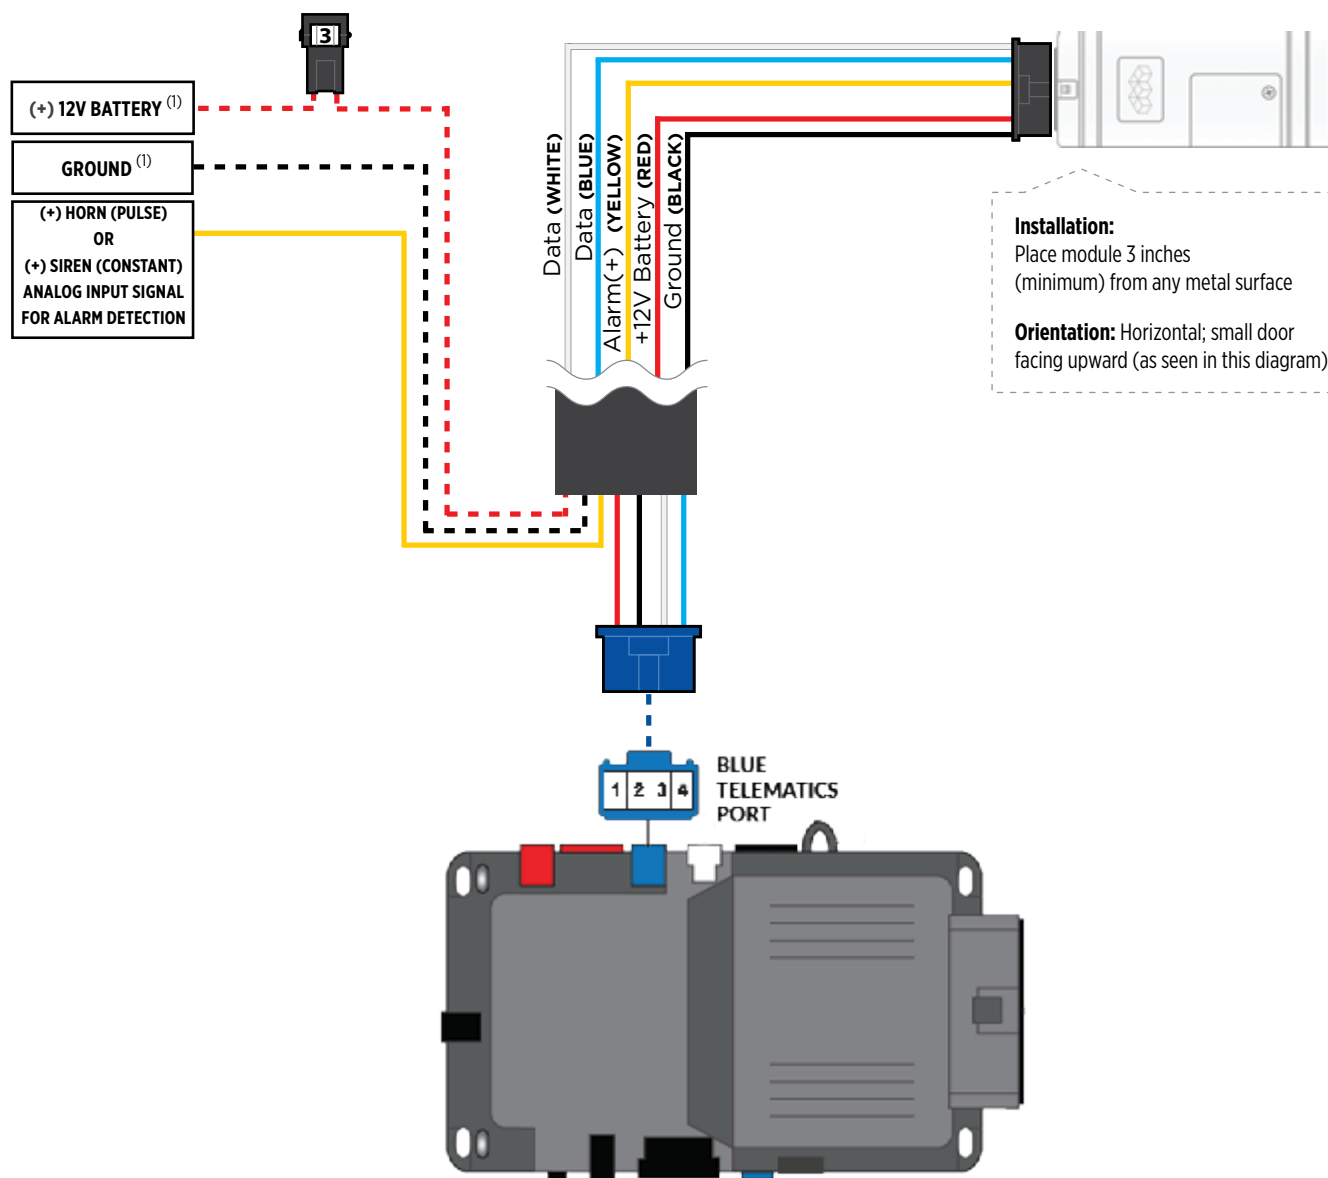



INSTALLATION, WIRING & PROGRAMMING GUIDE

STEP 3. NETWORK CONNECTIVITY

Once the telematics module is connected into the remote starter, two LED's will display to which networks you are connected to. (See LED Status Reference Chart on last page for details). **NOTE: The vehicle may need to be outside in an open area in order to connect to a cellular and/or GPS network.**

STEP 4. ADD A DEVICE/VEHICLE TO AN ACCOUNT

- a. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add your customers device/vehicle to your personal account.
- b. Enter the 16 digit "Serial Number" found at the back of the telematic device (SN: XXXXXX-XXXXXXXXXX) and Click "Submit the code".
- c. You are now in "Test Mode". **Test Mode will allow you up to 4 hours** for you to test the newly installed device. At any time during this 4 hour period, you can exit testing mode and make unit "Ready for Customer Delivery" by "Releasing the vehicle" or by "Transferring the vehicle" from your account.
NOTE: If you do NOT remove the vehicle from your account, it will automatically be removed from your account and make the unit "Ready for Customer Delivery".

STEP 5. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

- a. Click on the newly added vehicle from the vehicle list to enter the control screen (the screen that will allow you to control the vehicle's remote start functions). This will automatically take you to the "Vehicle Configuration" page for this vehicle. You will be prompt to "Set a Bypass Protocol" to use this device. Click "Ok".
- b. Now you must set the protocol for the telematic device. When combined with the iDatastart HCx remote starter previously installed, you must set the protocol to "ADS" and click "ACCEPT" then click "Done" at the top right corner.
- c. Now please allow a moment (About 5 minutes) for the telematic device to update your protocol selection and reboot. After this wait period it will be available to accept commands from the App. In the vehicle control screen, the Device Signal icon located above the Stop button will display the connectivity status of your telematic device. If the icon is Grayed out, Please wait, Device is still Offline. If icon is Green, Device is Online and Ready to go.
- d. Then from the top right click on of the Settings section edit the Vehicle name, configure the Auxiliaries that might have been added if applicable and click ACCEPT when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click ACCEPT once done.
- e. When your configurations are all completed, click "Done" at the top right corner. All Configurations will take effect.

STEP 6. TEST YOUR DEVICE

When the system is Online you start testing the unit from the vehicle control panel. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, ETC.) When done with the testing, from the vehicle list you can "Release" the vehicle. There are 2x different method to release it to the new owner. Choosing "release" will simply remove it from your account and make it "Ready for Customer Delivery". Choosing "transfer" will transfer the device to the new owner's account.

Also make sure that the Owners Card is handed to the New Owner of the vehicle. Doing this will ensure that the instructions on how to setup their App, Account and Vehicle is done correctly by using the device serial number located on the sticker affixed by the installer at the time of installation.

LED Status Reference Chart

LED Status	GREEN LED : Cellular Network	RED LED : GPS Network
OFF	No Cellular Network. No power to device.	No GPS Network. No power to device.
Flashing	Searching/Connecting	Searching/Connecting
ON Solid	Connection is established	Connection is established

RESET PROCEDURE

- 1 - Disconnect the main harness from the MyCar device.
- 2 - Wait approximately 10 seconds and reconnect the main harness to the MyCar device.
- 3 - Reset procedure Completed.



INSTALLATION, WIRING & PROGRAMMING GUIDE

MYCAR

AutoMobility[®]

400 Wright st.
Ville St-Laurent, Quebec
H4N1M6 - CANADA

©2021 Automobility Distribution Inc. All rights reserved.